

WE REALLY DO CARE!

We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:

KENNER PRODUCTS Consumer Affairs Dept. 1014 Vine St. Cincinnati, Ohio 45202


Manner

- 1984 Columbia Pictures Industries, Inc.
 1988 Columbia Pictures Television, a division
- © 1988 Columbia Pictures Television, a division of CPT Holdings, Inc. All Rights Reserved.


ASSEMBLY AND OPERATION



1. Bend legs and arms on figure to position him in seat.

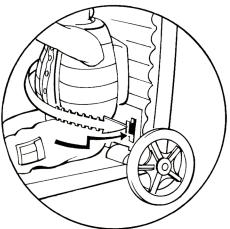


Attach seat belt by inserting pointed end into slot and holding to desired tightness by catching it in side of slot.

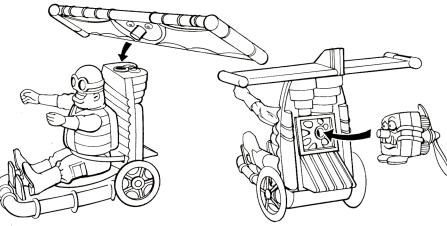


3. Insert peg on glider wing into hole on top of seat back.

 Insert nose peg, on opposite side of motor/propeller assembly, into hole in back of seat. Spin propeller manually.

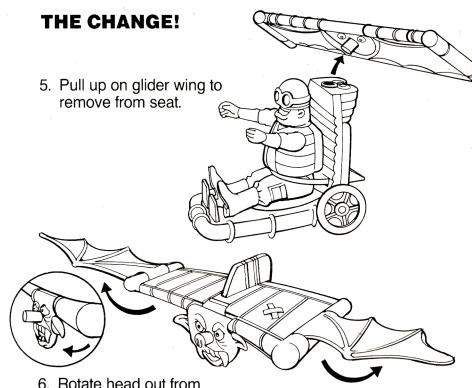


6. Rotate head out from underside of wing.


Rotate each ghost wing extension out from under side of glider wing to second snap.

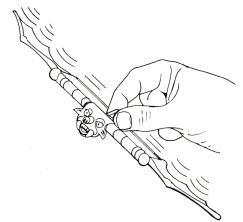

8. Ghost can be held for pretend flying.

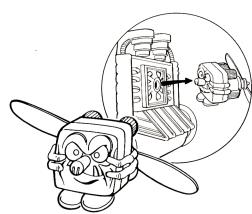

Pull propeller/motor assembly out from back of seat to reveal motor ghost.

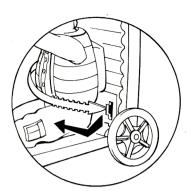

 Pull seat belt over and out to remove seated figure.



11. Pull up on helmet to extend head to open position.

