


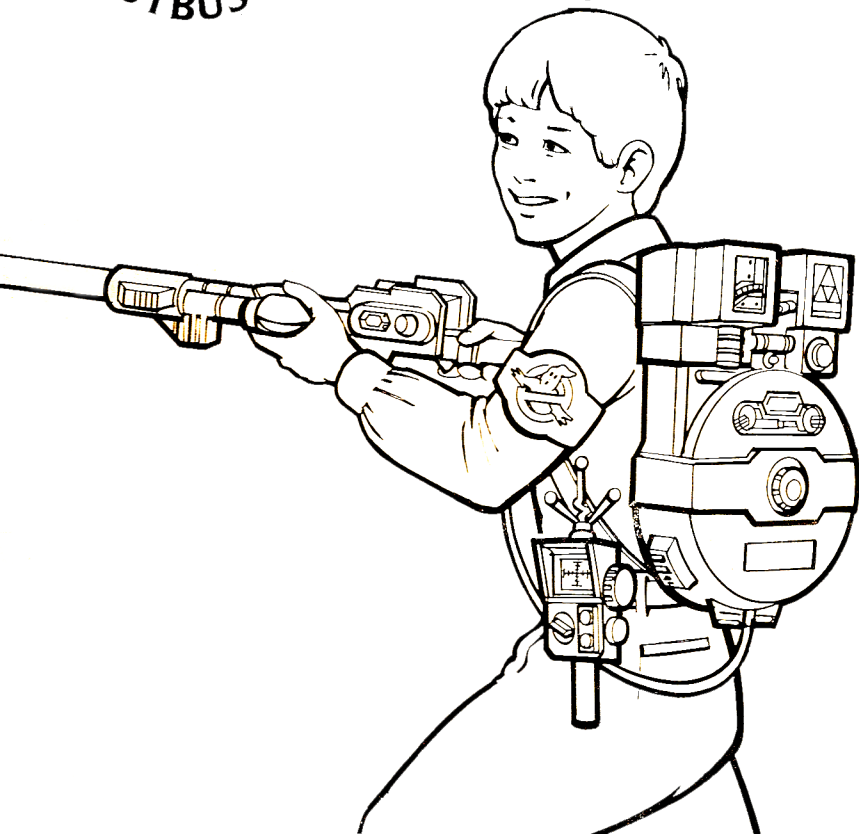

# PROTON PACK™

## ACCESSORIES



## WE REALLY DO CARE!



We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:


KENNER PRODUCTS  
Consumer Affairs Dept.  
1014 Vine St.  
Cincinnati, Ohio 45202

**Kenner\***

## LABEL PLACEMENT

Apply labels by following numbers on label sheets and these illustrations.

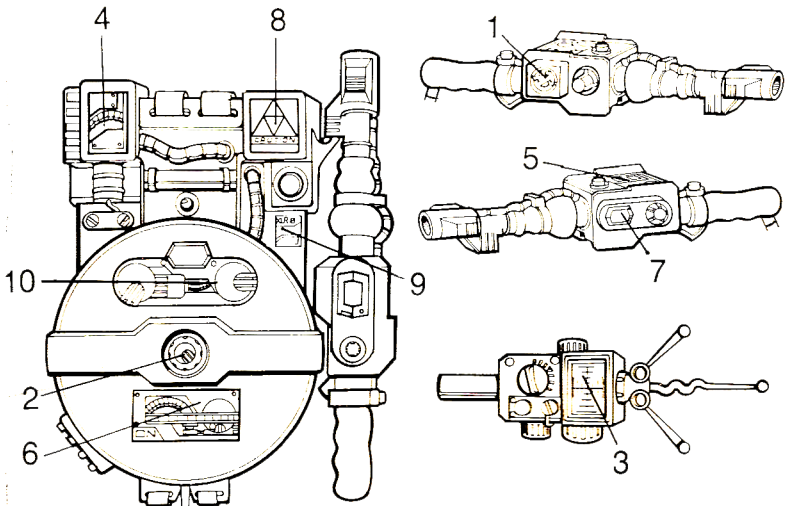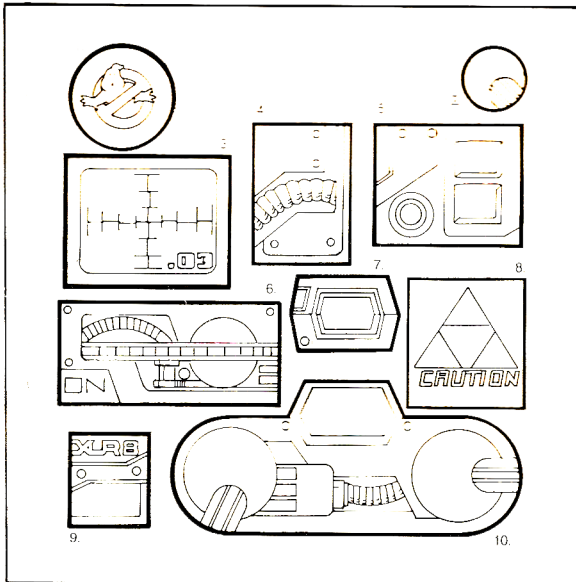

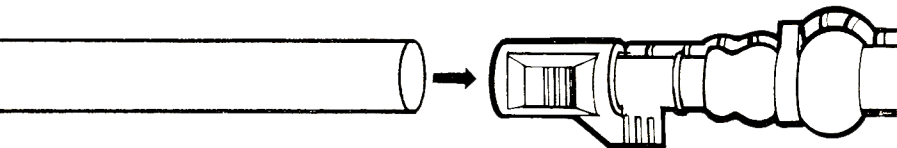


## **NUTRONA BLASTER™ TOY GUN**

1. Straighten and insert foam Nutrona Wand into Nutrona Blaster™.


## **I.D. CARD**


Fill in and keep in your wallet.

<b>THE REAL GHOSTBUSTERS</b>
<b>ID CARD</b>
NAME _____
ADDRESS _____
PHONE NUMBER _____

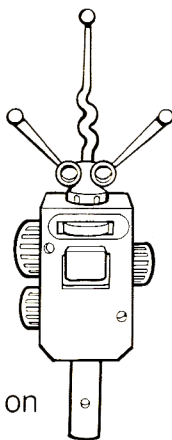


P.K.E. Meter can be stored on top of Proton Pack™.

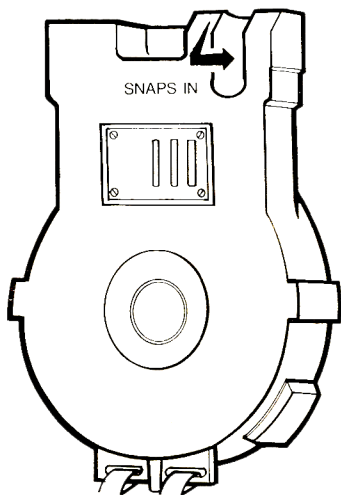


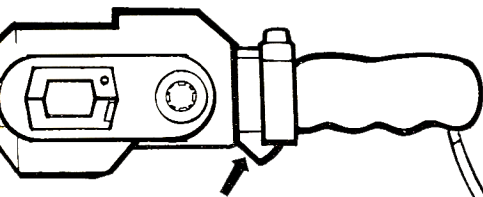

Squeeze trigger for sound.

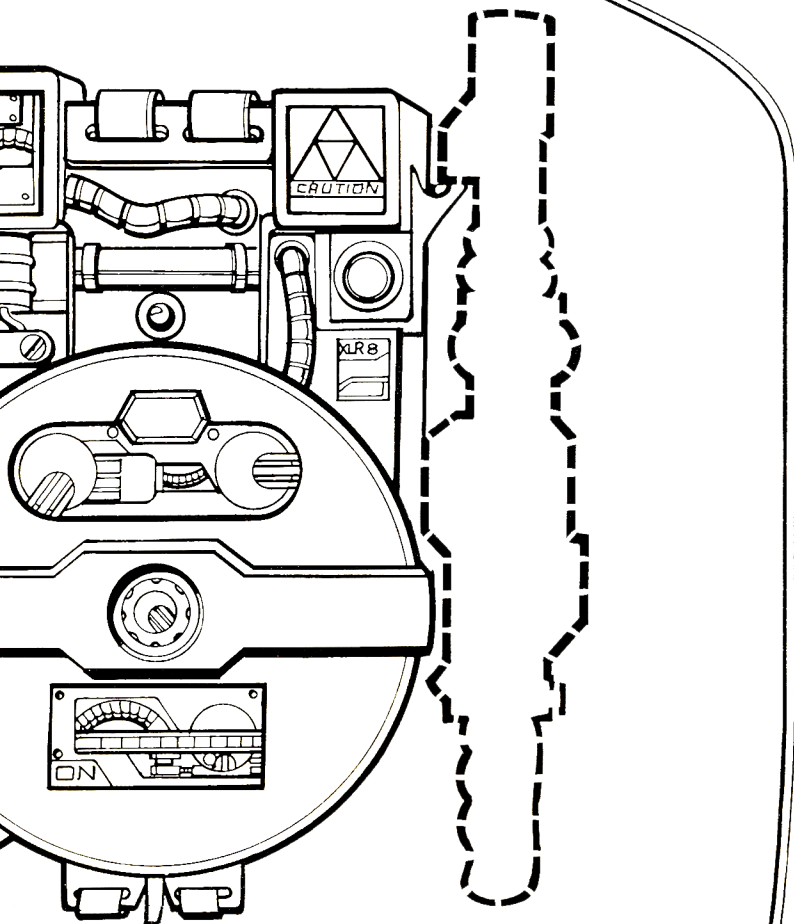


2. Insert Blaster Hose onto peg on bottom of Proton Pack™.
3. Nutrona Blaster™ can be stored on Proton Pack™ by placing Nutrona Blaster™ onto hook on Proton Pack™.

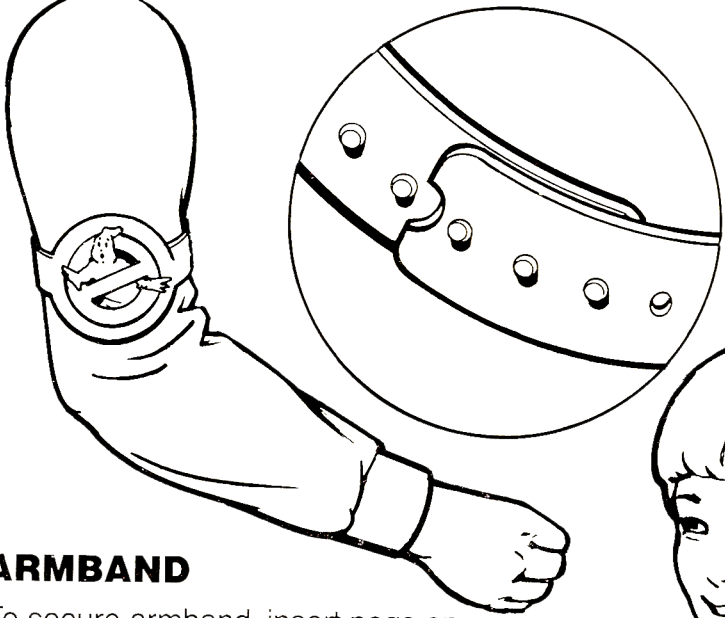


## ARMBAND

To secure armband, insert pegs on armband strap into holes on other side of armband strap after wrapping straps around arm.

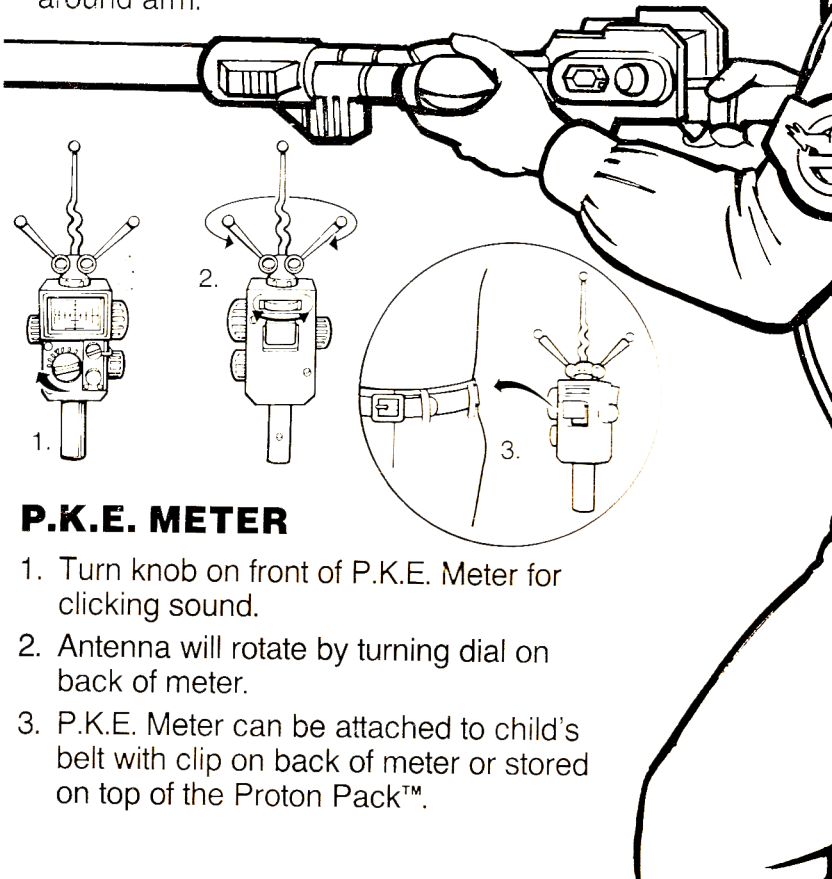

## P.K.E. METER

1. Turn knob on front of P.K.E. Meter for clicking sound.
2. Antenna will rotate by turning dial on back of meter.
3. P.K.E. Meter can be attached to child's belt with clip on back of meter or stored on top of the Proton Pack™.

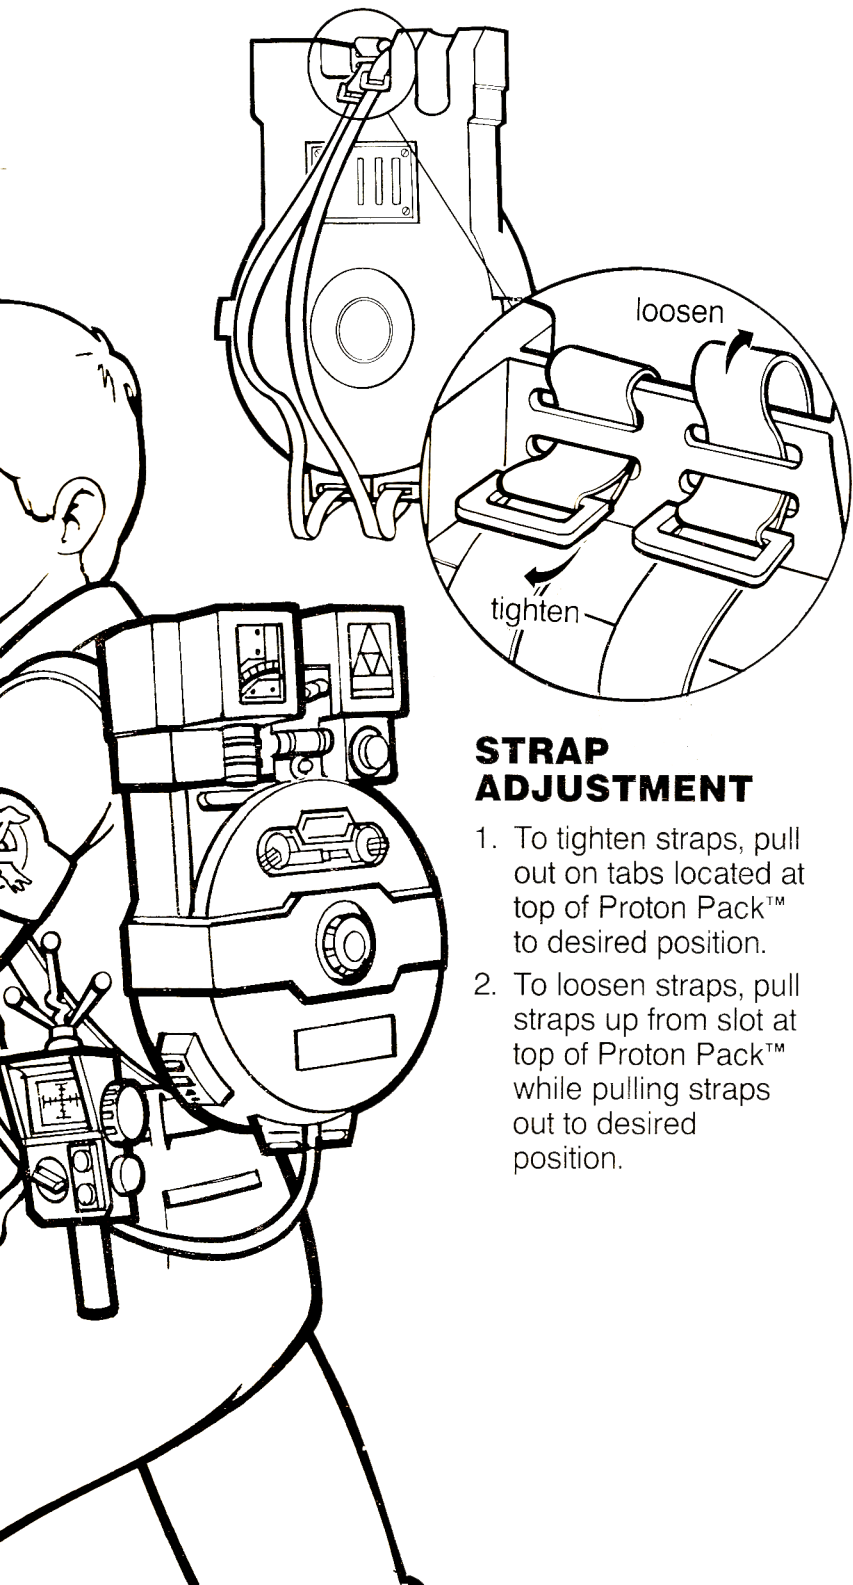

## **STRAP ADJUSTMENT**

1. To tighten straps, pull out on tabs located at top of Proton Pack™ to desired position.
2. To loosen straps, pull straps up from slot at top of Proton Pack™ while pulling straps out to desired position.